

Our Product Range

FOR YOUR HYGIENIC PROCESS



TORNADO® Rotary Lobe Pump

- Flow rates up to 120 m³/h
- Pressures up to 12 bar
- Temperature: 150 °C



NEMO® Progressing Cavity Pump

- Flow rates up to 140 m³/h
- Pressures up to 24 bar
- Temperature: 150 °C



NOTOS® Multi Screw Pump

- Flow rates up to 200 m³/h
- Pressures up to 16 bar
- Temperature: 130 °C



PERIPRO Peristaltic Pump

- Flow rates up to 13,000 l/h
- Pressures up to 10 bar
- Temperature: 80 °C



NETZSCH Barrel Emptying Systems

- Flow rates up to 12 m³/h.
- For emptying standard containers 20 l bis 200 l
- Residue without liner <1 %

Accessories

With the right accessories, the NETZSCH pumps can be seamlessly integrated into any process:



Piping for the aseptic application for the type NEMO® SA aseptic:


All static seals to the atmosphere are double sealed chambers. Sterile condensate, vapour and/or detector fluid is continuously supplied to the chambers. Through this a contamination proof design is ensured.



The mobile NEMO® beverage pump

On wheels, the pump can be used universally in viticulture, wineries, cider factories, breweries, distilleries and beverage production. Its advantages guarantee gentle and reliable conveyance of your media; they can be used flexibly in your process, are stable, require little maintenance and are easy to operate.

The mobile version is also optionally available for the TORNADO® rotary lobe pump.

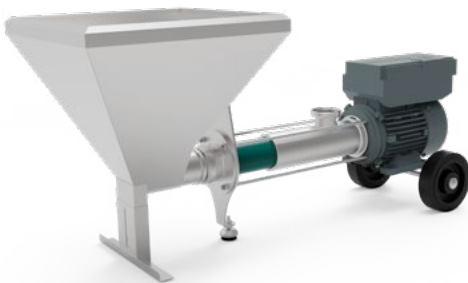

The NEMO® pump with funnel

The funnel facilitates optimal filling of the pump with chunky media such as fruit.

Get in contact with our technical and applications sales team to discuss your requirements at pumps.nas@netzsch.com

NETZSCH

NETZSCH Australia Pty Ltd

Head Office and Service Centre Brisbane

Regional Office and Service Centre Sydney

nas@netzsch.com

Phone: +61 7 3488 8183

Phone: +61 2 9641 2840

www.netzsch.com.au